GLEDOPTO®

Product Model: GL-C-301P Input Voltage: DC 12-24V

17mm

Product Parameter

User Instruction

ZigBee 5in1 LED Smart Controller Pro+

GL-C-301P

Stripping Length: 8-9mm Material: Fireproof PC

Communication Protocol: ZigBee 3.0 + 2.4G RF

Suggested Wire Type: 0.5-1.5mm² (24-16AWG)

Output Current/Channel: 6A Max

Total Output Current: 10A Max

IP Rate: IP20

Operating Temperature: -20~45℃

Size: 42x38x17mm

Function of Button

OPT:

Short Press: Switch current device function (switching device function will

automatically clear Zigbee and RF connections)

Long Press for 5 seconds: Enable/disable memory function (memory function is off by default, it determines whether to remember the power status before power off)

Reset:

Short Press: Switch the frequency.
Long Press for 5 seconds: Reset the controller. (After reset, it default back to RGBCCT).

Push:

Short press: Power On/Off.

Long press: Adjust brightness (Assuming: Long press increases brightness, release and long press again decreases brightness).

Frequency Settings

In order to be applicable to different power supplies, the frequency of device is selectable as 600Hz, 800Hz, 1000Hz, 2000Hz, 4000Hz, 800Hz with default frequency 1000Hz. Short press twice "Set" key, the frequency will switch into the next one. The indicator will flash in Pink color and resume to previous color after "off" for 2 seconds. The rule of indicator flashing times for different frequency please refer to table

1000Hz → 2000Hz → 4000Hz → 8000Hz → 600Hz → 800Hz → 1000Hz

	600Hz	800Hz	1000Hz	2000Hz	4000Hz	8000Hz
Flashing times	1	2	3	4	5	6

 
Indicator Light Status

White	RGBCCT		
Yellow	RGBW		
Blue	RGB		
Green	CCT		
Red	Dimmer		
Purple	Frequency switching		
A Light blue	Enable/disable memory function		

Wiring Diagram


RGBCCT:

abect.




RGBW:

 Under RGBW function, the RGBW strip can be connected, without any connection to "N" terminal.




RGB:

 Under RGB function, the RGB strip can be connected, without any connection to "N" terminal.




CCT:

 Under CCT function, two pieces of CCT strips can be connected, without any connection to "N" terminal, but the light strips will be controlled simultaneously.



DIMMER:

 Under dimmer function, five pieces of single color strips can be connected,



Connecting with the Gateway

Joining Network:

- 1. Connect the controller to power correctly. 2. Use the gateway's app to start device search, wait for a certain period
- (refer to the instructions of each gateway). If the gateway does not find the controller, try powering the controller again or resetting it.
- 3. After the gateway discovers the controller, add the controller to the designated room or group.
- 4. Once joined to the network, you can start using the controller.

Leaving Network:

In the app, delete the controller that needs to leave the network. The controller will flash 3 times, indicating successful disconnection.

Note: Disconnection of the controller will clear the 2.4G RF connection and enter the reset state.

The product works with many ZigBee 3.0 Gatewayslike Philips Hue, Amazon ECho Plus or Smart Things











Any group "On'

Remote Control Pairing/Unpairing

Pairing:

1) Turn off the controller, then power on after 10 seconds.

2 Within 4 seconds of powering on, press the "On" button of any group on the RF remote control (see the user manual of each remote control for details).

3 When the light strip connected to the controller flashes it indicates connect with the remote control successfully



(Power on the device, within 4s)

Unpairing:

- 1) Turn off the controller, then power on after 10 seconds.
- 2 Within 4 seconds of powering on, press the "Master On" button on the RF remote control or press the "On" button of the controller's group 5 times.
- 3When the light strip connected to the controller flashes, it indicates a disconnection from the remote control



2.4GHz Remote Control Scene Memory Function:

- ① Click on the button(S1,S2,S3,S4)of the remote control to enter the scene menory function.
- 2 Long press to save the scene: Short press to activate the scene.

Compatible with 2.4G RF Remote Control



Mode Description

1 Static Warm white

5 Static Green color 6 Static Blue color

7 16 Million Color Gradient

8. RGB Color Jumping

- 2. Static Day white color
- 3 Static Cold white
- 4 Static Red color
- 9. Color Breathing (Brightness gradually changes from 100% to 0%, then back to 100% to 0% in sequence. Adjusting color or color temperature can switch colors in this mode, press the "M" key to exit this mode).

Compatible with 2.4G RF Remote Control

This controller can adjust the saturation using the remote control buttons.



Reset Method

- 1. Button reset: Press and hold the RESET button for more than 5 seconds, the light strip flashes 3 times, indicating the reset is complete.
- 2. Power On/Off reset:
- 1. Power on the light strip controller.
- 2. Within 2 seconds, disconnect the power,
- 3. Wait for at least 5 seconds to ensure complete power-off
- 4. Repeat the above steps 5 times.
- 5. The light strip will flash 3 times, indicating that the reset is complete



connections after reseting

correct and secure. Do not operate while the power is on.

- 2. Use the product under the rated voltage. Overvoltage or
- undervoltage may damage controller. Attention 3. Do not disassemble the product, as it may cause fire and electric

1. Bafore turning on the power, please ensure that all wiring is

- 4. Do not use the product in direct sunlight, damp, high-temperature, or other harsh environments
- 5. Do not use the product in metal shielded areas or near strong magnetic fields, as it will severely affect the wireless sianaltransmission of the product.

theactual product for practical applications.

DISCLAIMERS

- * Due to our continuous adoption of new technologies, the product specifications may change without prior notice.
- * This manual is for reference and guidance purposes only. t does not guarantee complete consistency with the actual product. Please refer to
- * The components and accessories described in this manual do not represent the standard configuration of the product, The specific configuration is subject to the package contents. * All text, tables, and images in this manual are protected by relevant naional
- laws and may not be used without our company's permission. * This product is compatible with thirdpary products (such as apps, hubs, etc,)
- as stated in the gateway compatibility chart. However, ourcompany takes no responsiblty for any issues that may arise from changes made by third-paty products, resulting in incompatibility orthe partial loss of functionality

REP

LED-Trading Tobias Ebert Schoeneicher Str. 42, Schoeneiche b. Berlin, Germany, 15566 0049 30 641 689 17 info@led-trading.de GL-CP-I-301